



## Sontheimer

Garanti: 12 ay

Bu rne ait Trkiye ii kapı teslim fiyat ve teslim sresi ieren teklifimizi almak iin [info@yursat.com.tr](mailto:info@yursat.com.tr) e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi iin +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.

**Sontheimer** Markası, tedarik sresi iin ltfen bizimle iletiŐime geiniz.

*Firmamız Sontheimer Trkiye Distribtr veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen rnlerde sadece Orjinal ve yeni rn teklifi sunmaktadır. Bu sitede gsterilen zel marka adları ve ticari markalar ilgili sahiplerinin mlkiyetindedir, talep durumunda kaldırılmaktadır.*

rn	Aıklama
<a href="#">LT-FH7-001</a>	
<a href="#">R12/63K3/Z35/4xZ36/X85/H11/MS</a>	Repair switch, 12 pole / Maintenance switch, 12 poles encapsulated / enclosed + X85 = mixer-mixer malaxeur + Z35 = rotated by 90 ° Threaded hole above 4x M32, below 4x M32 and 1x M16 Delivery time: 3-5 days Weight: 6.589 kg Customs tariff no .: 85365080 Country of origin: DE
<a href="#">HLT20A/3E/Z20/10</a>	Main switch, 3 poles / On load switch, 3 poles 4-hole mounting / 4-hole mounting Delivery time: 3-5 days Weight: 0.119 kg Customs tariff no .: 85365080 Country of origin: DE
<a href="#">10000069</a>	
<a href="#">10000081</a>	
<a href="#">10000112</a>	
<a href="#">10000187</a>	
<a href="#">10000262</a>	
<a href="#">10000402</a>	
<a href="#">10000501</a>	
<a href="#">10000516</a>	
<a href="#">10000875</a>	
<a href="#">10001120</a>	

<a href="#">10001523</a>
<a href="#">10001835</a>
<a href="#">10001877</a>
<a href="#">10002116</a>
<a href="#">10002119</a>
<a href="#">10003174</a>
<a href="#">10003358</a>
<a href="#">10003437</a>
<a href="#">10003438</a>
<a href="#">10003439</a>
<a href="#">10003468</a>
<a href="#">10004023</a>
<a href="#">10004149</a>
<a href="#">10004317</a>
<a href="#">10004756</a>
<a href="#">10004846</a>
<a href="#">10006537</a>
<a href="#">10007193</a>
<a href="#">10008545</a>
<a href="#">10011016</a>
<a href="#">10011791</a>
<a href="#">10013901</a>
<a href="#">1506/6ZM 06R</a>
<a href="#">5-102742</a>
<a href="#">A2/12E /Z20GB/Z30</a>
<a href="#">A2/16E /X83</a>
<a href="#">A2/8ZM /NS</a>
<a href="#">A3/11E /Z5/20/X71S/F804</a>
<a href="#">A3/16V /Z48/X83/84/F601</a>
<a href="#">A3/8E/Z33RG</a>
<a href="#">A3/8ZM /Z33S</a>

<a href="#">A3/8ZM/Z20GB/FR/F901 (10004999)</a>
<a href="#">A4/8E /F601/X70S</a>
<a href="#">A4/8ZM/Z20/FR/GB/F901</a>
<a href="#">A422061</a>
<a href="#">CO 126/12E-R 16 A EV</a>
<a href="#">HLO40/3ZM/Z20 /RS/D1</a>
<a href="#">HLO63/4E/Z33SW/1</a>
<a href="#">HLT100/4V/Z35/3/64/X83</a>
<a href="#">HLT20/3ZM/Z33</a>
<a href="#">HLT25/3E/Z20</a>
<a href="#">HLT25A/3ZM/Z33</a>
<a href="#">IEC60947-3 125A/Ui</a>
<a href="#">JT-FH7-001</a>
<a href="#">LT-FH7- 001 (RLO32/3PM-D1/Z33 GB)</a>
<a href="#">LTFH7001</a>
<a href="#">LT-FH7-007 20A</a>
<a href="#">N3/16EU1/Z33 /SP400V</a>
<a href="#">NLO25/4E</a>
<a href="#">NLT125/3E/Z33</a>
<a href="#">NLT125/3E/Z33 /19/1</a>
<a href="#">NLT125/4V /Z39/4xZ58/X83</a>
<a href="#">NLT125/4V/Z39</a>
<a href="#">NLT125/4V/Z39/62/4xZ58/X83</a>
<a href="#">NLT16/4V/Z33/X83/Z71+X83</a>
<a href="#">NLT16/4VZM/Z33 /Z71</a>
<a href="#">NLT20/4ZM/Z20</a>
<a href="#">NLT25/3VZM/Z33 /X83</a>
<a href="#">NLT25/3ZM/Z33</a>
<a href="#">NLT25/3ZM/Z33 /62/HE20</a>
<a href="#">NLT25/4E/Z33</a>

<a href="#">NLT250/3V/Z20/Z65</a>
<a href="#">NLT32/3E/Z33</a>
<a href="#">NLT32/3V/Z33/45</a>
<a href="#">NLT40/3E /Z1/20</a>
<a href="#">NLT40/3ZM/Z20</a>
<a href="#">NLT63/3V/Z33/45</a>
<a href="#">NLT63/4E/Z33 -D2/Z1/4xZ58</a>
<a href="#">NLT80/3E/Z33</a>
<a href="#">NLT80/3ZM/Z33</a>
<a href="#">NS3/32EU1/Z33 /SP 230V</a>
<a href="#">R6/16GLM /Z33S/Z1/Z36</a>
<a href="#">R9/16PL M-25/Z33S/Z1/Z36</a>
<a href="#">R9/16PLM/Z33 /3/36/D1</a>
<a href="#">R9/16PLM/Z33 S/Z1/36/D1</a>
<a href="#">R9/16PLM/Z33 S/Z1/Z36</a>
<a href="#">R9/16PLM/Z33S/1/36/D1</a>
<a href="#">RLO63/6PM-D2/Z33SW/2xH11</a>
<a href="#">RLT32/3PM-D1/Z33 GB</a>
<a href="#">RLT80/6PM-D3/Z33SW/2xH11</a>
<a href="#">S681</a>
<a href="#">SEA1/8E /NS</a>
<a href="#">SEA10/12E /Z16/X83</a>
<a href="#">SO30005</a>
<a href="#">SODIV</a>
<a href="#">ST031/11ZM /Z32SF/X99/X84</a>
<a href="#">ST031/8E /X70S/Z31</a>
<a href="#">ST073/40E /Z35/F101</a>
<a href="#">ST31/8ZM</a>
<a href="#">ST32/11ZM /Z20S/OV/X99/X84</a>
<a href="#">ST41/8ZM</a>
<a href="#">ST42/11ZM /Z20S/OV/X99/X84</a>

<a href="#">ST61/11ZM /NS</a>
<a href="#">U1/11E /X83</a>
<a href="#">U1/12E</a>
<a href="#">U1/4ZM</a>
<a href="#">U2/8ZM/F621</a>
<a href="#">U2/8ZM/X70A/NS</a>
<a href="#">U3/8ZM /X70A/Z15/NS</a>
<a href="#">ULT125/3V /Z33S-D2/Z45/2xHV11</a>
<a href="#">URR1/11ZM/NS</a>
<a href="#">URR1/8ZM</a>
<a href="#">URR1/8ZM/X70A/NS</a>
<a href="#">URR1/8ZM/X85</a>
<a href="#">URR1/8ZM/X85=Schild tief</a>
<a href="#">URR2/8ZM/Z32/F312</a>
<a href="#">V3/8ZM</a>
<a href="#">V3/8ZM/X70A/NS</a>
<a href="#">VN32-F3-D-SS9</a>
<a href="#">WAB1014/4ZM /Z32/51/X99</a>
<a href="#">WAB1739/16ZM /X83</a>
<a href="#">WAB758/32ZM</a>
<a href="#">WAB759/32ZM /NS</a>
<a href="#">WAB837/32S</a>
<a href="#">WAB857/16ZM /NS/X99</a>
<a href="#">WAB943/32S</a>
<a href="#">WAE1199/8PLM /Z33SW/54/X85</a>
<a href="#">WAE1851/8ZM</a>
<a href="#">WAE1971/11E /Z8/53/NS/X85</a>
<a href="#">WAE2019/11ZM /NS/Z20R-GB/X85</a>
<a href="#">WAF217/8ZM /Z54/X73</a>
<a href="#">WAF306/SORR4/8E/NS/Z16/Z53</a>

<a href="#">WAG1132/N3/7ZM /Z20/10/PE</a>
<a href="#">WAH1260/6ZM /X85/79/Z54</a>
<a href="#">WAH663/32E</a>
<a href="#">WAH663/32E Z33/55/FR/GB</a>
<a href="#">WAH663/32E /Z33/55/FR/GB</a>
<a href="#">WAI152/11ZM/NS/Z20/X85</a>
<a href="#">WAL419/NLT164V/Z33/71/X83</a>
<a href="#">WAM1432/NLT20/4ZM /Z20</a>
<a href="#">WAM778/20/16E /Z6/7/35/X85/AW/FS</a>
<a href="#">WAM947/400/16E /X83/Z35/X85/Z7</a>
<a href="#">WAM967/250/16E /X83/X85/Z35/Z7/AW</a>
<a href="#">WAM967/250/16E /X83/X85/Z35/Z7S/AW</a>
<a href="#">WAM976/250/16E /Z17/Z20</a>
<a href="#">WAN298/NLT16/4VZM/Z20/69/X83</a>
<a href="#">WAP159/RLT63A/6PM -D3/Z33/1/2xH11</a>
<a href="#">WAV072/11ZM /NS/X99</a>
<a href="#">WAW1013/8ZM /32SF</a>
<a href="#">WAW1013/8ZM /Z32</a>
<a href="#">WAW1013/8ZM Z32 SF BJ</a>
<a href="#">WAW1506/6ZM /X85/79/Z54</a>
<a href="#">WAW825/LT40/3ZM /Z33S/69/F901</a>
<a href="#">WAW883/8ZM /Z32SF/X99</a>
<a href="#">WAW937/8ZM /Z32SF</a>
<a href="#">WP12/32S</a>
<a href="#">WS1/11V /Z3/X85</a>
<a href="#">WS1/11ZM/Z32</a>
<a href="#">WS1/8ZM/F620</a>
<a href="#">WS2/11ZM /Z20S/OV/X99</a>
<a href="#">WS2/12E/X84</a>
<a href="#">WS2/8ZM</a>

<a href="#">WS4/8ZM /NS</a>	
<a href="#">WS5/8ZM /Z11/X70S</a>	
<a href="#">X72/SO/D1 /F039</a>	
<a href="#">ZM-Antrieb/D0 /Z20</a>	
<a href="#">ZM-Antrieb/D1 /NS</a>	
<a href="#">NLT80/3ZM/Z33</a>	Not-Ausschalter, 3 polig / Emergency stop switch, 3 poles
<a href="#">HLT125/3V/44/X72/83</a>	
<a href="#">HLT25/4ZM/Z33S/NVG40E</a>	Main switch, 4 poles / On load switch, 4 poles Central mounting with nut (1 hole)
<a href="#">U1/8ZM</a>	Change-over switch 60°, 1 pole / change-over switch 60°, 1 pole Central mounting with nut (1 hole)
<a href="#">RLT80/3PM-D2/Z33GB/71/H11</a>	Maintenance switch, 3 poles / Maintenance switch, 3 poles encapsulated / enclosed
<a href="#">WAF472/NLO16/3V/Z20/75/X83</a>	
<a href="#">NVGO16V</a>	
<a href="#">SIWTCH 220V 16A</a>	
<a href="#">10028425</a>	BC9/8ZM/NS/X99 Binary code encoding switch, 1-pole 1-9 / Binary code switch, 1 pole 1-9 Central hole fastening / Central mounting with nut (1 hole)
<a href="#">10028426</a>	ST31/8ZM/NS/X84/99 Step switch, 3 positions, 1 pole / Step switch, 3 positions, 1 poles Central hole fastening / Central mounting with nut (1 hole) X84 = 60° - 1 at 9 o'clock
<a href="#">WS1/8ZM/F622</a>	Changeover switch, 60°, 1 pole 60°, 1 pole Central hole fastening / Central mounting with nut (1 hole) 10004228
<a href="#">U1/8ZM/Z32/F611</a>	60° changeover switch, 1 pole / 60° changeover switch 1 pole Central hole fastening / Central mounting with nut (1 hole) 10002289
<a href="#">URR1/8ZM/F330</a>	Switch, double-sided retraction / change-over switch, double-sided return Central hole fastening / Central mounting with nut (1 hole) 10004229
<a href="#">So30005 U2/8zm/X70a/Ns Umschalter 2p.1-0-2(F604)</a>	
<a href="#">Ws2/8zm/F620 35q</a>	
<a href="#">Urr1/8zm/X85 12s</a>	
<a href="#">U1/8zm/Z32/F604 31s</a>	
<a href="#">Rlt25/3pm/Z1/33/69/Hv11</a>	
<a href="#">Switch Application Rlt25/3pm-</a>	

<a href="#">D1/Z1/33/69/Hv11</a>	
<a href="#">Sodiv</a>	
<a href="#">Rlt16/3pm-D1/Z33/Hv 11</a>	
<a href="#">Rlt25/3pm-D1/Z33/Z1/69/Hv11</a>	
<a href="#">Urr1/8zm/F330 31s</a>	
<a href="#">Urr1/8zm/X70a/Ns</a> <a href="#">Sodivurr1/8zm/X70a/Ns</a>	
<a href="#">U2/8zm/X70a/Ns So30005umschalter</a> <a href="#">2p.H-0-A (F611)</a>	
<a href="#">S0rr4/11efg/Z53-X70s</a>	
<a href="#">Wai085/11v /Z6</a>	Wahlschalter T2583
<a href="#">Rlt80/6pm-D3/Z33sw/2xh11</a> <a href="#">Sodivreparaturschalter, 6 Polig /</a> <a href="#">Maintenance Switch, 6poles</a>	
<a href="#">Rlt25/3pm-D1/Z1/33/69/Hv11 01s</a>	
<a href="#">Wam967/250/16e/X83/X85/Z35/Z7s/Aw</a> <a href="#">Switch Bypass 1 Phase 315a 4p With</a> <a href="#">Padlockable Handle</a>	
<a href="#">St41/8zm/70s</a>	
<a href="#">1506/6zm 06r Schalter Waw</a>	
<a href="#">Wap159/Rlt63a/6pm -D3/Z33/1/2xh11</a> <a href="#">Sondernockenschalter Gem.</a> <a href="#">Schalterschema</a>	
<a href="#">St31/8zm/70s</a>	
<a href="#">Rlt25/3pm-D1/Z33 /Z1/69/Hv11</a>	
<a href="#">Rlt25/3pm/Z1/33/36/Hv11 Dm</a>	
<a href="#">Lt-Fh7-00163a 690v</a>	Wartungsschalter Sechs Pole mit zwei Hilfskontakten
<a href="#">Nlt20/3e/Z31sf</a>	
<a href="#">Ws1/8zm/70s</a>	
<a href="#">Lt-Fh7-001 Schalter</a>	
<a href="#">Wah769/Nlt16/4v /Z33/71/X83</a>	Wahlschalter
<a href="#">Iec 60947-3 80a/Ui 23a</a>	
<a href="#">Zm-Antrieb/D1 /Z33/71</a>	for WAH769 / NLT16 / 4V / Z33 / 71 / X83
<a href="#">Nbgu1050110e</a>	

<a href="#">R3/Ws1/16pl/Ov/Z33/X84</a>
<a href="#">U2/8zm/F611 25s</a>
<a href="#">Zm-Antrieb/D1/Z33</a>
<a href="#">Wam967/250/16e/X83/X85/Z35/Z7s/Aw Switch Bypass 1 Phase 480a 4p With Padlockable Handle</a>
<a href="#">U1/8zm/X70a/Z32sf</a>
<a href="#">Wam947/400/16e /X83/Z35/X85/Z7 Wahlschalter</a>
<a href="#">Rlt25/3pm-D1/Z1/33/69/Hv11 01s (Cover)</a>
<a href="#">Ws1/8zm/F622 45s</a>
<a href="#">Rlt25/3pm-D1/Z33/1/69/Hv11</a>
<a href="#">Rlt25/3pm/Z1/33/36/Hv11</a>
<a href="#">U1/8zm/Z32/F611 43s</a>
<a href="#">Nlt125/4v/Z39/62/4xz58/X83 Not-Aus Schalter 4pol. Bodenbefestigung</a>
<a href="#">V3/8zm/X70a/Ns Sodivoltmeter - Umschalter, 3 Verkettete Spannungen</a>
<a href="#">Wa02235/HI025/4e/Z33sw</a>
<a href="#">V3/8zm 19s</a>
<a href="#">Iec60947-3 Schalter 32a/Ui 690v</a>
<a href="#">Rlt25/3pm-D1/Z1/33/1/69/Hv11</a>
<a href="#">Pm/D1-Deckel/Z33/69</a>
<a href="#">09122/18 84 0 Wag1003 / Nlt250 / 3v Circuit Breaker For Vacuum Thermal Oil Press Lc 125/6</a>
<a href="#">Nlt40/4v/Z33/Z68</a>
<a href="#">Nlt25/3zm/Z33 Eingangsschalter</a>
<a href="#">Ws1/8zm/X70a/Ns</a>
<a href="#">Rlt25/3pm/Z1/33/36/Hv11dm</a>
<a href="#">Nlo25/4e Not-Aus-Schalter, 4-Polig</a>
<a href="#">Ws2/8zm/X70a/Ns</a>
<a href="#">Lth-Fh7-001</a>
<a href="#">Wam967/250/16e /X83/X85/Z35/Z7s/Aw</a>

[Wahlschalter](#)

[Wae1971/11e /Z8/53/Ns/X85](#)  
[Wahlschalter](#)